


Crayola® Sidewalk Paint Sprayer

READ THIS FIRST!

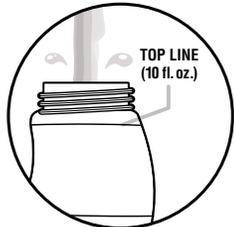

- **Dilute the Paint**

Water must be added to the paint in order to use it with the Crayola Sidewalk Paint Sprayer. The Sprayer will not work with undiluted paint. See section (II) of the instruction sheet for paint preparation instructions.




- **Shake Well**

After adding water to the paint reservoir, place the cap back on tightly. Shake vigorously.



- **Save the Cap**


You will need the cap from the paint reservoir for future paint mixing and storage.

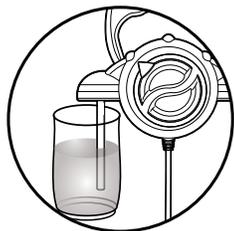

- **Clean Sprayer After Every Use**

If the Sprayer is not cleaned after use, it may clog and stop working. See section (VIII) of the instruction sheet for cleaning instructions.

⚠ CAUTION: Do not immerse paint holder/selector or spray handle in water.

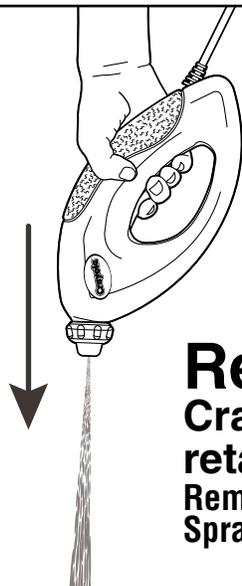

SPRAYER WILL ONLY WORK WHEN POINTED DOWNWARD.

If the Sprayer nozzle is pointed away from the ground, the motor automatically shuts off and the Sprayer stops spraying.

Refills

Crayola Sidewalk Paint is available in 6 colors at most retail stores where Crayola products are sold.

Remember to follow the paint preparation instructions when refilling the Sprayer with Sidewalk Paint.

Troubleshooting

for the Crayola® Sidewalk Paint Sprayer

| Problem | Possible Cause | Solutions |
|---|---|--|
| <p style="text-align: center;">Sprayer does not spray, and motor does not run</p> | <p>Sprayer nozzle not pointed toward the ground</p> | <p>The Sprayer is designed to only spray downward and will shut off as soon as it is pointed away from the ground. Always point the Sprayer toward the ground when spraying.</p> |
| | <p>Batteries not installed correctly or need to be changed</p> | <p>See Section (I) of the instruction sheet for battery installation instructions.</p> |
| | <p>Battery tray not installed correctly</p> | <p>The tray should be installed with the batteries facing upward. See the image in section (I) of the instruction sheet.</p> |
| <p style="text-align: center;">Sprayer does not spray, but motor runs</p> | <p>Clogged nozzle</p> | <p>Use a toothbrush and water to remove any dried paint from the tip of the nozzle.</p> |
| | <p>Paint not diluted</p> | <p>The Sprayer will not work properly if the paint has not been diluted. See section (II) of the instruction sheet for paint preparation instructions.</p> |
| | <p>Batteries need to be changed</p> | <p>See section (I) of the instruction sheet for battery installation instructions.</p> |
| <p style="text-align: center;">Sprayer does not spray consistently</p> | <p>Sprayer nozzle not pointed toward the ground</p> | <p>The sprayer is designed to only spray downward and will shut off as soon as it is pointed away from the ground. Always point the Sprayer toward the ground when spraying.</p> |
| | <p>Batteries need to be changed</p> | <p>See section (I) of the instruction sheet for battery installation instructions.</p> |
| <p style="text-align: center;">Paint comes out in globs instead of stream or spray</p> | <p>Paint not diluted</p> | <p>The Sprayer will not work properly if the paint has not been diluted. See section (II) of the instruction sheet for paint preparation instructions.</p> |
| | <p>Batteries need to be changed</p> | <p>See section (I) of the instruction sheet for battery installation instructions.</p> |